

MC-303 System Exclusive Messages

Sound Module Mode

TO TURN THE RX NOTE MESSAGE OFF

PART 1: F0 41 10 00 03 12 00 40 18 08 00 20 F7
PART 2: F0 41 10 00 03 12 00 40 1A 08 00 1E F7
PART 3: F0 41 10 00 03 12 00 40 1B 08 00 1D F7
PART 4: F0 41 10 00 03 12 00 40 1C 08 00 1C F7
PART 5: F0 41 10 00 03 12 00 40 1D 08 00 1B F7
PART 6: F0 41 10 00 03 12 00 40 1E 08 00 1A F7
PART 7: F0 41 10 00 03 12 00 40 1F 08 00 19 F7
PART 8: F0 41 10 00 03 12 00 40 10 08 00 28 F7
PART 9: F0 41 10 00 03 12 00 40 11 08 00 27 F7
PART 10: F0 41 10 00 03 12 00 40 19 08 00 1F F7
PART 11: F0 41 10 00 03 12 00 40 12 08 00 26 F7
PART 12: F0 41 10 00 03 12 00 40 13 08 00 25 F7
PART 13: F0 41 10 00 03 12 00 40 14 08 00 24 F7
PART 14: F0 41 10 00 03 12 00 40 15 08 00 23 F7
PART 15: F0 41 10 00 03 12 00 40 16 08 00 22 F7
PART 16: F0 41 10 00 03 12 00 40 17 08 00 21 F7

TO TURN THE RX NOTE MESSAGE ON

PART 1: F0 41 10 00 03 12 00 40 18 08 01 1F F7
PART 2: F0 41 10 00 03 12 00 40 1A 08 01 1D F7
PART 3: F0 41 10 00 03 12 00 40 1B 08 01 1C F7
PART 4: F0 41 10 00 03 12 00 40 1C 08 01 1B F7
PART 5: F0 41 10 00 03 12 00 40 1D 08 01 1A F7
PART 6: F0 41 10 00 03 12 00 40 1E 08 01 19 F7
PART 7: F0 41 10 00 03 12 00 40 1F 08 01 18 F7
PART 8: F0 41 10 00 03 12 00 40 10 08 01 27 F7
PART 9: F0 41 10 00 03 12 00 40 11 08 01 26 F7
PART 10: F0 41 10 00 03 12 00 40 19 08 01 1E F7
PART 11: F0 41 10 00 03 12 00 40 12 08 01 25 F7
PART 12: F0 41 10 00 03 12 00 40 13 08 01 24 F7
PART 13: F0 41 10 00 03 12 00 40 14 08 01 23 F7
PART 14: F0 41 10 00 03 12 00 40 15 08 01 22 F7
PART 15: F0 41 10 00 03 12 00 40 16 08 01 21 F7
PART 16: F0 41 10 00 03 12 00 40 17 08 01 20 F7

Normal Mode

TO TURN THE RX NOTE MESSAGE OFF

RPS PT 1: F0 41 10 00 03 12 00 40 10 08 00 28 F7
RPS PT 2: F0 41 10 00 03 12 00 40 11 08 00 27 F7
RPS PT 3: F0 41 10 00 03 12 00 40 12 08 00 26 F7
RPS PT 4: F0 41 10 00 03 12 00 40 13 08 00 25 F7
RPS PT 5: F0 41 10 00 03 12 00 40 14 08 00 24 F7
RPS PT 6: F0 41 10 00 03 12 00 40 15 08 00 23 F7
RPS PT 7: F0 41 10 00 03 12 00 40 16 08 00 22 F7
RPS PT 8: F0 41 10 00 03 12 00 40 17 08 00 21 F7
PTN PT1: F0 41 10 00 03 12 00 40 18 08 00 20 F7
PTN PT2: F0 41 10 00 03 12 00 40 1A 08 00 1E F7
PTN PT3: F0 41 10 00 03 12 00 40 1B 08 00 1D F7
PTN PT4: F0 41 10 00 03 12 00 40 1C 08 00 1C F7
PTN PT5: F0 41 10 00 03 12 00 40 1D 08 00 1B F7
PTN PT6: F0 41 10 00 03 12 00 40 1E 08 00 1A F7
PTN PT7: F0 41 10 00 03 12 00 40 1F 08 00 19 F7
PTN PTR: F0 41 10 00 03 12 00 40 19 08 00 1F F7

TO TURN THE RX NOTE MESSAGE ON

RPS PT 1: F0 41 10 00 03 12 00 40 10 08 01 27 F7
RPS PT 2: F0 41 10 00 03 12 00 40 11 08 01 26 F7
RPS PT 3: F0 41 10 00 03 12 00 40 12 08 01 25 F7
RPS PT 4: F0 41 10 00 03 12 00 40 13 08 01 24 F7
RPS PT 5: F0 41 10 00 03 12 00 40 14 08 01 23 F7
RPS PT 6: F0 41 10 00 03 12 00 40 15 08 01 22 F7
RPS PT 7: F0 41 10 00 03 12 00 40 16 08 01 21 F7
RPS PT 8: F0 41 10 00 03 12 00 40 17 08 01 20 F7
PTN PT1: F0 41 10 00 03 12 00 40 18 08 01 1F F7
PTN PT2: F0 41 10 00 03 12 00 40 1A 08 01 1D F7
PTN PT3: F0 41 10 00 03 12 00 40 1B 08 01 1C F7
PTN PT4: F0 41 10 00 03 12 00 40 1C 08 01 1B F7
PTN PT5: F0 41 10 00 03 12 00 40 1D 08 01 1A F7
PTN PT6: F0 41 10 00 03 12 00 40 1E 08 01 19 F7
PTN PT7: F0 41 10 00 03 12 00 40 1F 08 01 18 F7
PTN PTR: F0 41 10 00 03 12 00 40 19 08 01 1E F7